


INSTALLATION INSTRUCTIONS: ORP/PH Controller

1. PANEL- Attach to wall using appropriate fasteners. Holes (1/4 inch diameter) are provide in four corners of panel
2. CONTROLLER- Put one screw into board to hang controller (top/center of controller). Hang controller over screw.
Secure with two screw by removing power access panel & putting screws through bottom left & right corner holes.
3. FLOW CELL- Secure with four screws- CAUTION: Do not over tighten.
4. PUMP- Put two screw into board for each pump. Hang pump.
5. Follow component manuals to complete installation.

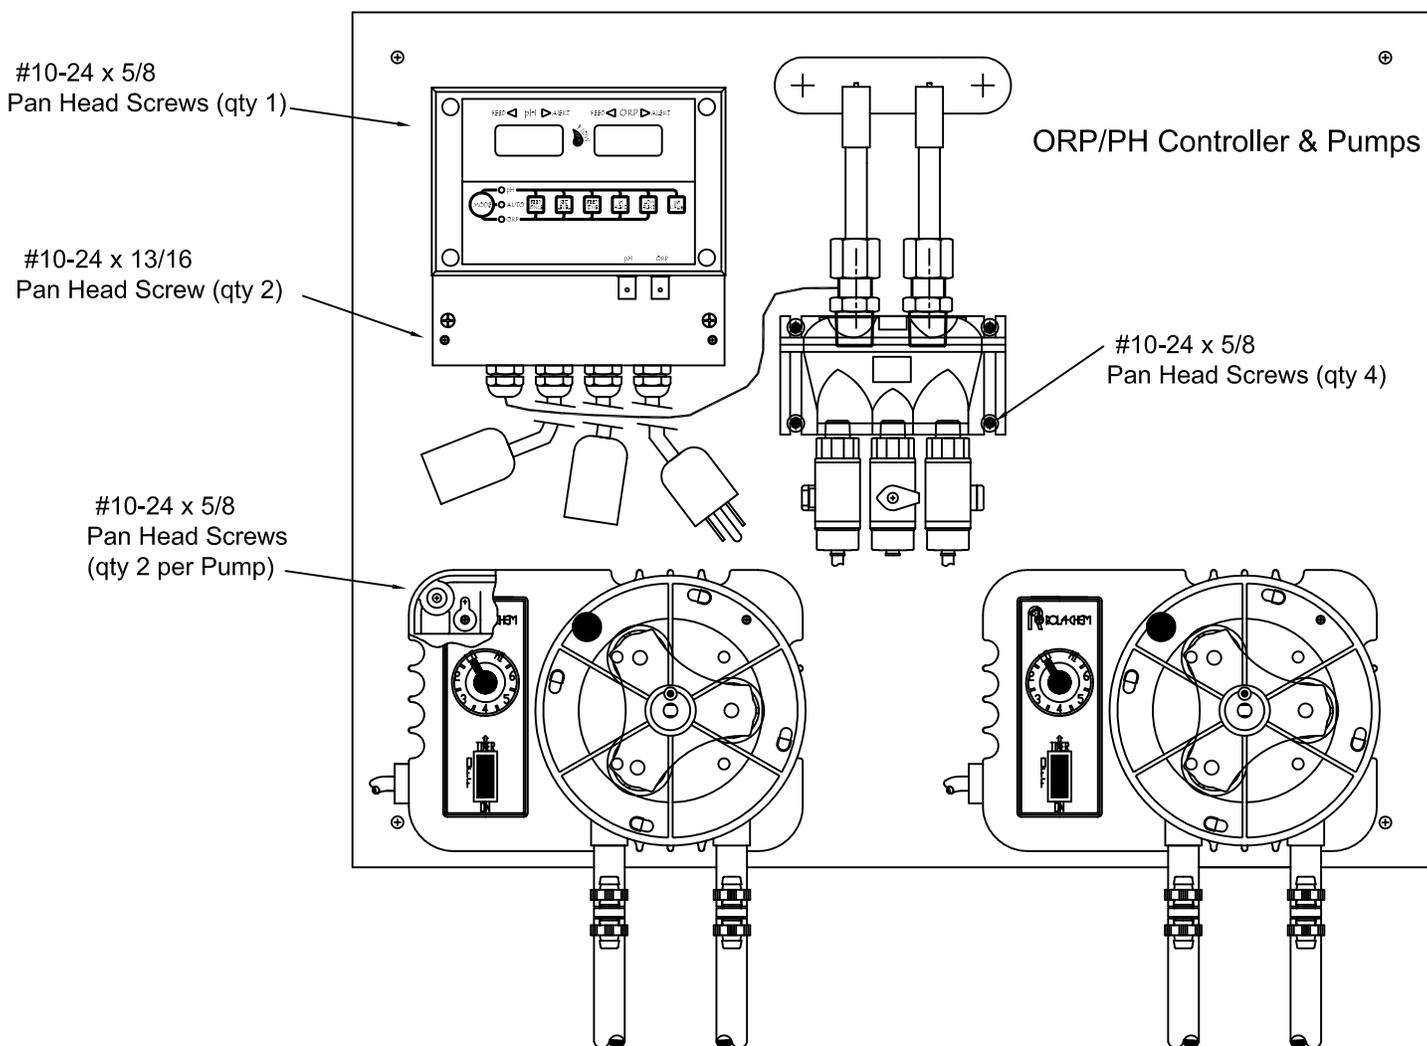

INSTALLATION INSTRUCTIONS: PH Controller

1. PANEL- Attach to wall using appropriate fasteners. Holes (1/4 inch diameter) are provide in four corners of panel
2. CONTROLLER- Put two screws into board to hang controller. Hang controller and then tighten screw to secure.
(Note: Fillister Head Screws have a smaller diameter head than Pan Head Screws)
3. FLOW CELL- Secure with four screws- CAUTION: Do not over tighten.
4. PUMP- Put two screw into board for each pump. Hang pump.
5. Follow component manuals to complete installation.

